



A RIPLEY® BRAND

# RP560

## Optical Power Meter User Guide




# Contents

---

Introduction	3
Device Overview	3
Important Safety Information	4
Understanding the Main screen	5
Wavelengths	6
Projects	8
Settings	11
Integration with Windows InSpec	12
Integration with InSpec for Mobile	19
Common Test Procedures	23
Certifications and Contact Information	27

# Introduction

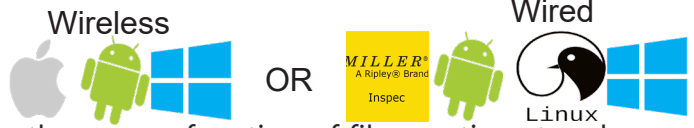

The RP560 is an optical power meter used for verifying the proper function of fiber optic networks. This document will serve as an overview of the major functions and features of the device.



Read and understand all of the instructions and safety information in this manual before operating this tool.

## Device Overview

**Protective Adapter Cover**  
*Cover flips closed to protect fiber interface when storing RP560. When flipped open, cover may be used as a stand to rest the RP560 at an angle on a flat surface.*

**LCD Screen**  
*Screen displays all relevant information for fiber testing. Backlight timer may be adjusted in device options menu.*

**dB/dBm and SetRef Button**  
*On the Main screen, press button once to switch between dB and dBm modes. Hold button (in dBm mode) to set reference for the currently-selected wavelength.*

**Save Button**  
*On the Main screen, press button once to save currently-displayed*

**OK/Menu Button**  
*Used to access menu system and select settings within menus.*

**USB Port (on side of unit)**  
*Used to connect RP560 to a computer running the InSpec software.*

**Directional Buttons**  
*Used to navigate menu system and review saved readings (context-sensitive functions). In addition when on the Main screen pressing left will toggle Auto WaveID and Up/Down will cycle through supported wavelengths*

**Power Button**  
*Press once to turn unit ON or OFF.*

# Important Safety Information



Read and understand all of the instructions and safety information in this manual before operating this tool.



## Laser Hazard

Avoid eye exposure to open fiber connectors and interfaces when working with fiber systems. They may be connected to a live laser source.

Do not look into the output port of a laser source.

Point fiber endfaces toward non-reflective surfaces to prevent reflection of laser.



## Electric Shock Hazard

Pay attention to proper battery polarity. Do not mix battery types or manufacturers.

Do not open the unit with the exception of the battery compartment door.

Use this unit only for its intended purpose as outlined in this document.



## Damage to Item Hazard

Do not leave item in direct sunlight or near heat sources, submerge in water, or subject unit to strong impact.


Cover the fiber interface with the flip-cap when not in use.



**Do not throw this product away.**

Contact your local recycling station to dispose of properly.

# Understanding the Main screen

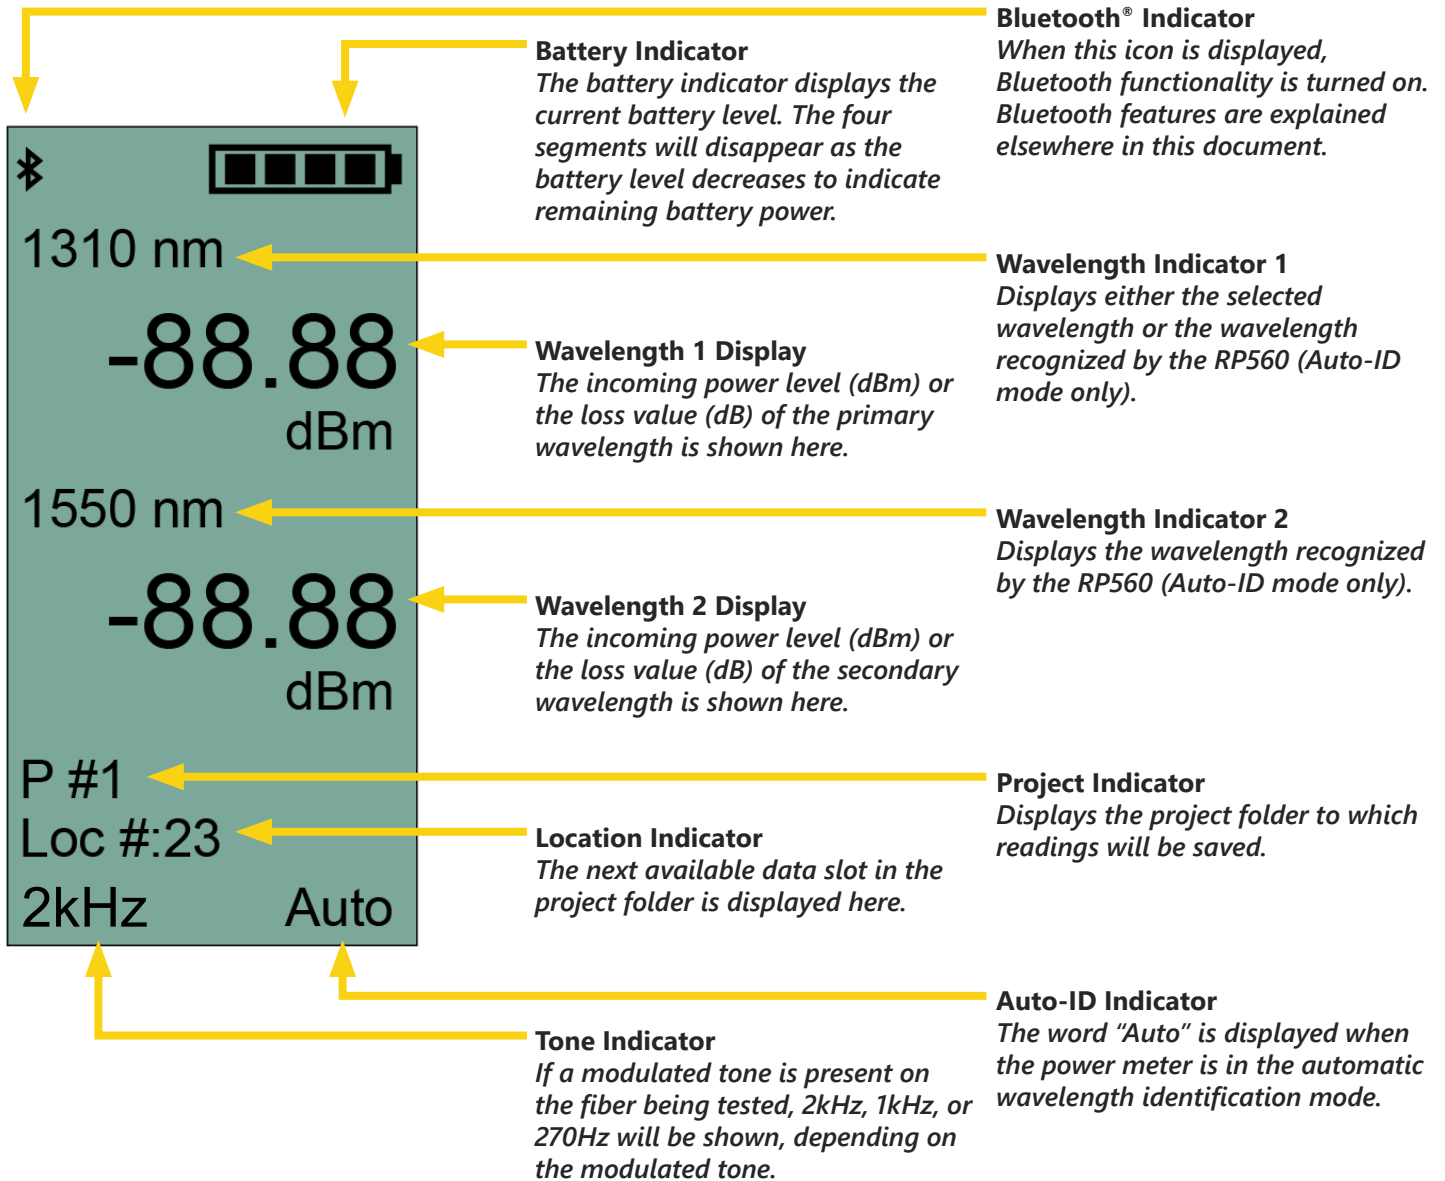

The Main screen of the RP560 acts as the general user interface for fiber testing.

Up to two wavelengths may be displayed at one time, but it is important to note that the dual wavelength view only functions when the RP560 is set to Auto-ID mode and it is currently receiving a signal from an DLS 6XX-series light source that is **ALSO** set to Auto-ID mode and transmitting two wavelengths.


The Auto-ID mode allows users to automatically switch to the correct wavelength being transmitted on the fiber. Novice users may find this feature helpful if they do not understand the difference between wavelengths.

Similarly, the Auto-ID mode allows two wavelengths to be tested at once. When the compatible light source transmits both wavelengths, the RP560 will recognize the output power of both wavelengths individually and provide a dBm power level or dB loss value for each wavelength.

In all other measurement modes, only one wavelength/measurement will be displayed.


# Wavelengths

Press the OK/Menu button to access the Main Menu

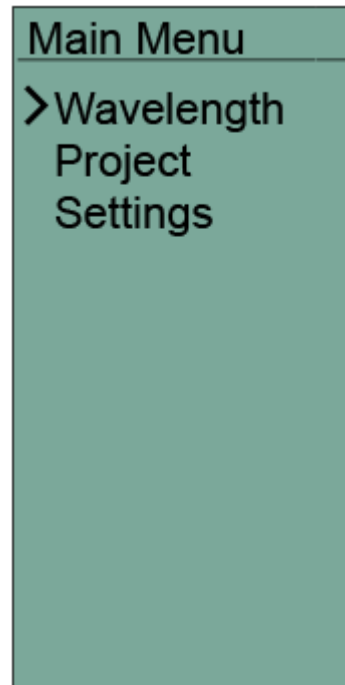

Use the Up/Down arrow buttons to move the cursor to the option you would like to explore. Press the Left arrow button to go back to the Main screen. Press the OK/Menu button or the Right arrow button to select an option.

Press the OK or Right arrow button to select the Wavelength menu.

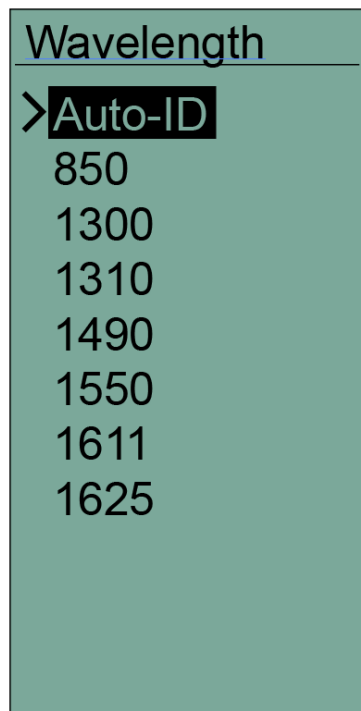

The Wavelength menu shows all measurable wavelengths.

The currently-selected option is highlighted. The cursor may be moved up and down the list with the Up/Down arrow buttons.

Press the OK button or the Right arrow button to select the wavelength that the cursor indicates.



Press the Left arrow button to return to the Main Menu, and once again to return to the Main device screen.

The Main screen of the RP560 will adjust based on the wavelength mode selected. See below for examples of different states the Main screen may display.

Selection on Wavelength Menu

Main screen (no light detected)




Main screen (light detected)

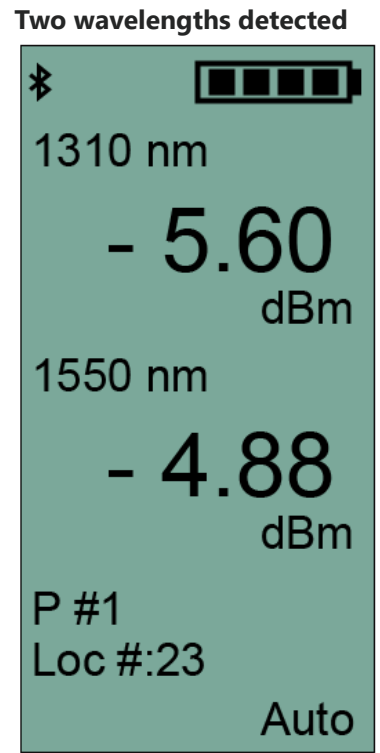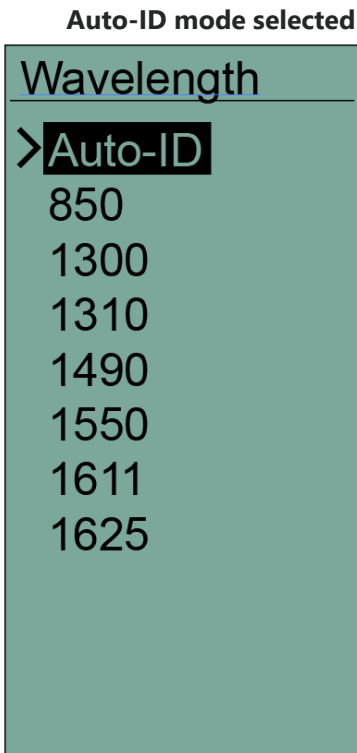

Single wavelength selected

No light detected for wavelength

Laser signal detected

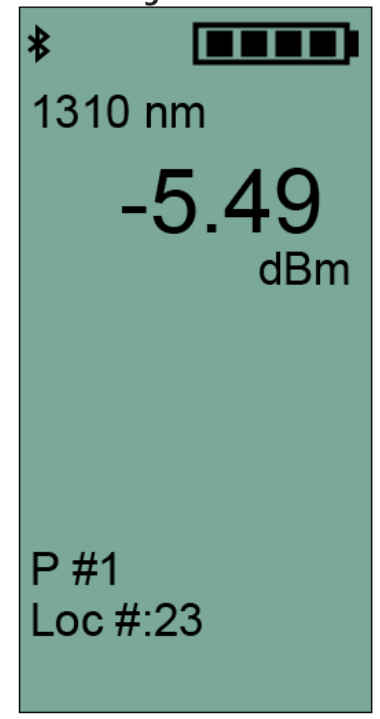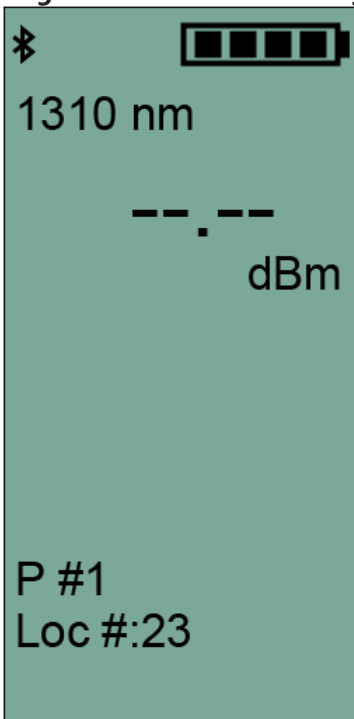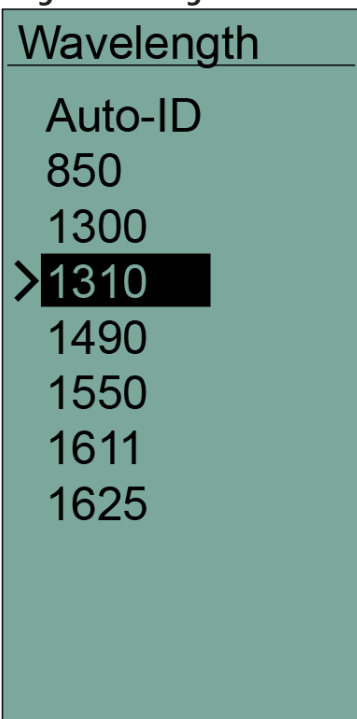


# Projects

Press the OK/Menu button to access the Main menu.



Use the Up/Down arrow buttons to move the cursor to the option you would like to explore. Press the Left arrow button to go back to the Main screen. Press the OK/Menu button or the Right arrow button to select an option.

Press the OK or Right arrow button to select the Project menu.

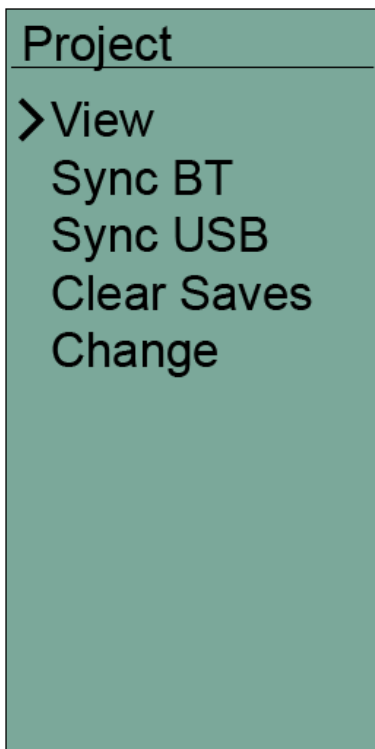

The Project menu allows you to view and edit all readings saved to the various project folders on the RP560.

The cursor may be moved up and down the list with the Up/Down arrow buttons.

Press the OK button or the Right arrow button to select the option that the cursor indicates.

Press the Left arrow button to return to the Main Menu, and once again to return to the Main device screen.

The "View" option allows you to view and delete readings in the current project folder.

"Sync BT" and "Sync USB" will transfer all readings in the project folder to the InSpec software (Android™, Apple® iOS, Windows®).

"Clear Saves" deletes ALL readings in the current folder.

"Change" allows you to select a different project folder for testing and/or editing.




Select "View" to see all saved readings in the current folder.

Project	Readings
>View	>1 0.53
Sync BT	2 1.24
Sync USB	3 0.89
Clear Saves	4 6.20
Change	5 0.57

The readings will be displayed in numerical order. The numbers in the left column are automatically assigned as the Save button is pressed on the Main screen of the RP560. In the example at left, 5 readings have been saved.

Use the Up/Down arrow buttons to navigate through the list. Over 500 readings may be saved in each project folder.

Press the OK/Menu button or the Right arrow button to see a detailed view of the currently-selected reading.

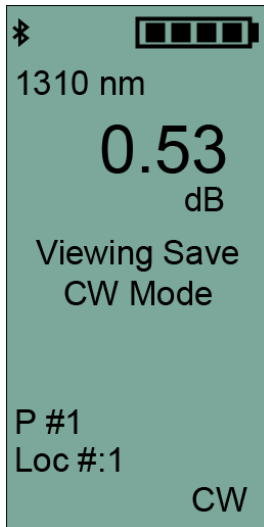

In the detailed view, all information relevant to the reading is displayed onscreen.

The wavelength, measurement, measurement mode (dB/dBm), project folder, save location, and wavelength mode (CW or Auto) are all shown.


Use the Up/Down arrow buttons to cycle through the saved readings.

Use the Left arrow button to return to the list view.



Press the OK/Menu or Right arrow button when viewing a saved reading to delete the reading. A confirmation dialog will pop up to ensure readings are not deleted accidentally.

Use the arrow buttons to select Yes or No. The reading will be deleted if Yes is selected using the OK/Menu button.

Deleted readings will be indicated in the list and in the detailed view.


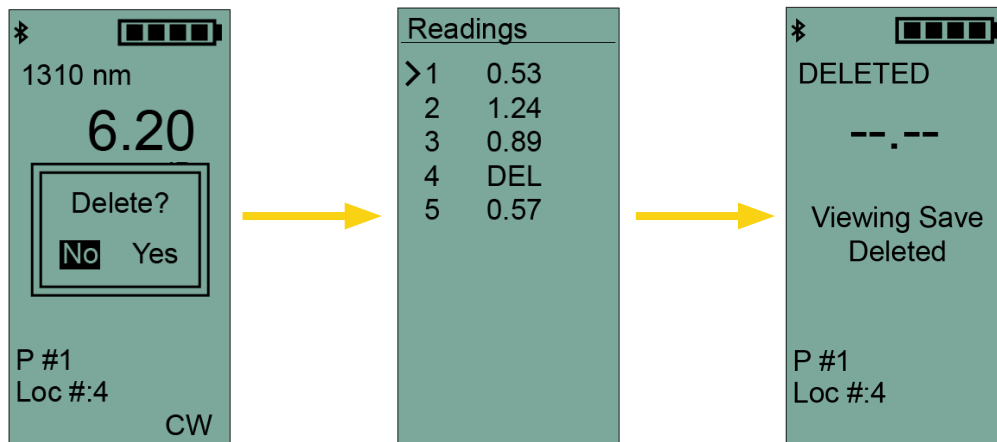


Move the cursor to the "Clear Saves" option. Press the OK/Menu button or the Right arrow button to bring up the confirmation dialog. Selecting "Yes" will delete all readings in the project folder.

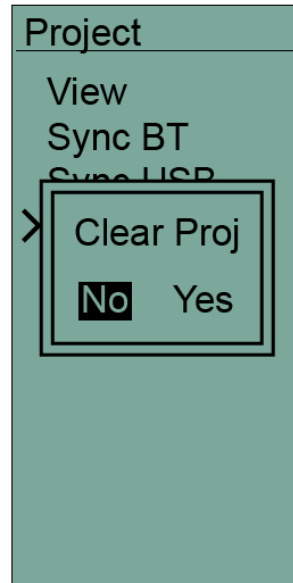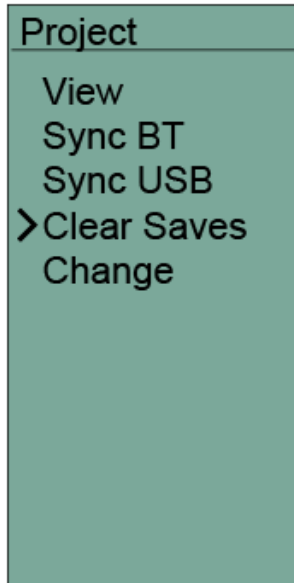



Move the cursor to the "Change" option. Press the OK/Menu button or the Right arrow button to bring up the Project Selection menu. Select a project from the list using the OK/Menu or Right arrow button to change the folder where readings are saved.

The selected project will be highlighted.

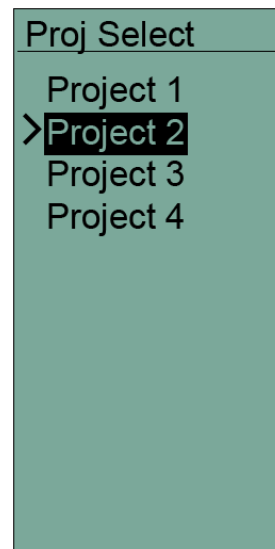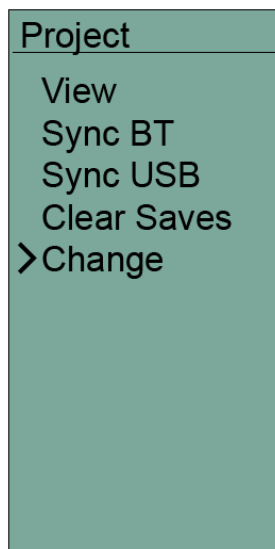

# Settings

Press the OK/Menu button to access the Main menu. Then select Settings.

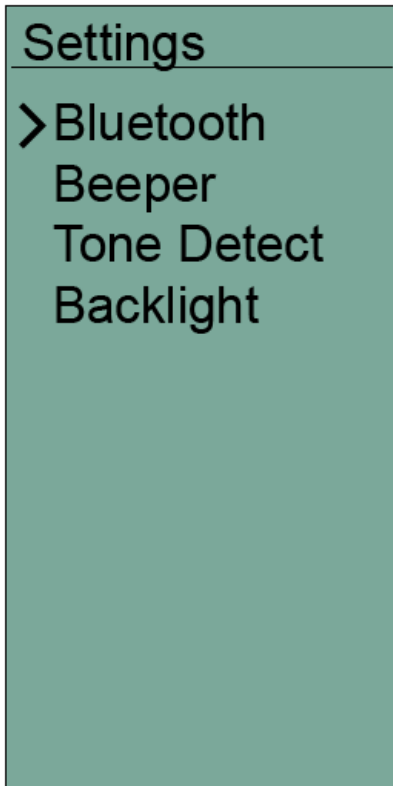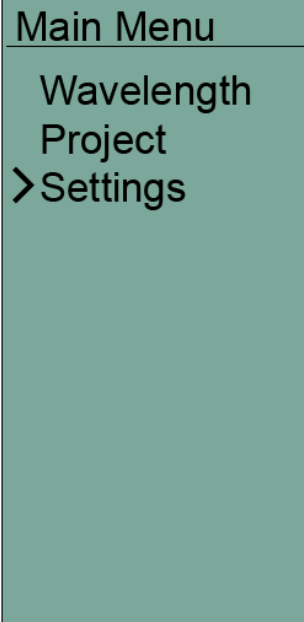

The Settings menu allows you to change several user settings on the RP560.

The cursor may be moved up and down the list with the Up/Down arrow buttons.

Press the OK button or the Right arrow button to select the option that the cursor indicates.

Press the Left arrow button to return to the Main Menu, and once again to return to the Main device screen.

The "Bluetooth" option allows you to turn Bluetooth functionality ON or OFF. Factory default setting is OFF.

"Beeper" turns the audible alert ON and OFF. Factory default setting is ON.

"Tone Detect" turns the detector for 2kHz, 1kHz, and 270Hz ON or OFF. When set to OFF, the RP560 will not indicate if a modulated signal is received. Factory default setting is ON.


"Backlight" allows you to set the timeout for the screen backlight. Options include OFF (never turns on), 5 seconds, 15 seconds, and 30 seconds. The selected option will be highlighted. Factory default setting is 15 seconds.

# Integration with Windows InSpec

Plug the RP560 into a Windows PC running the new InSpec software to offload saved data and create reports.

**Data Display**  
*Readings from the RP560 are displayed in this area. Deleted readings do not appear.*


**OPM Display**  
*All test data from the RP560 is displayed LIVE in this area. One or two wavelengths may be shown.*

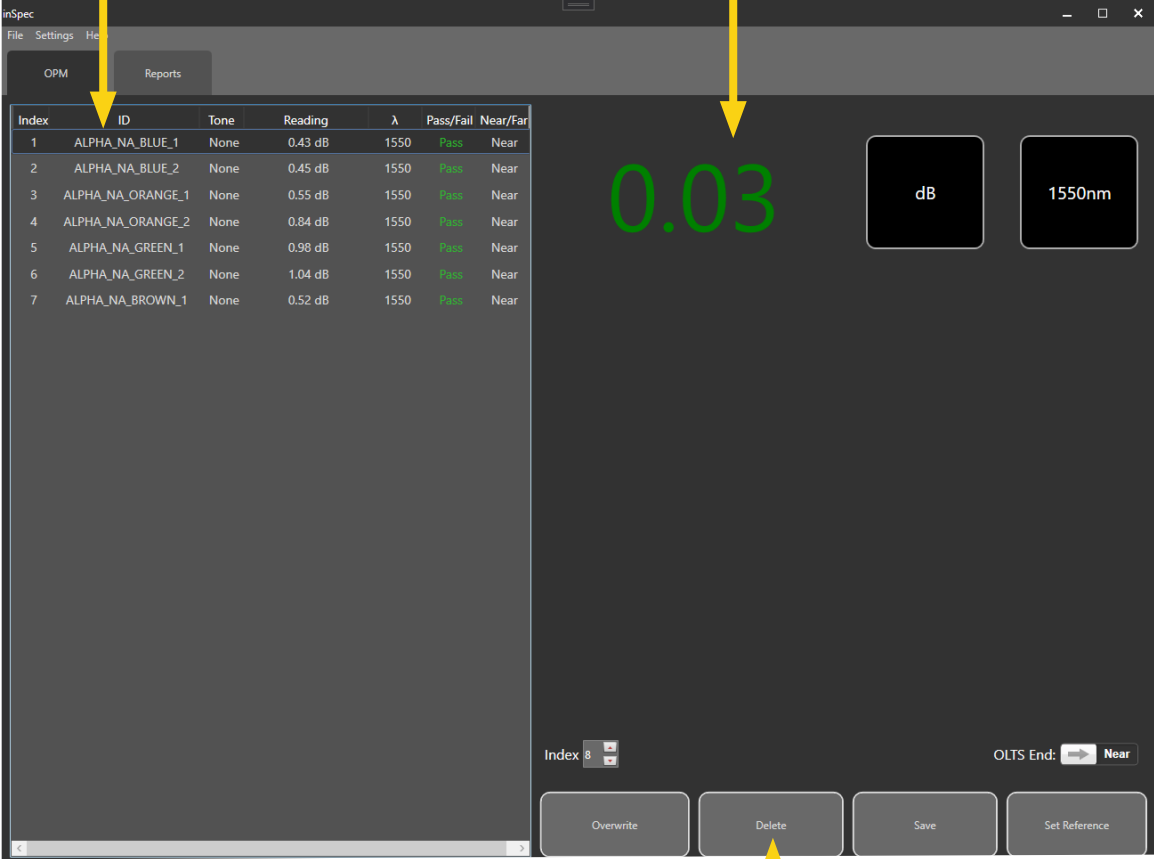

The screenshot shows the InSpec software interface. On the left, there is a table with columns: Index, ID, Tone, Reading, λ, Pass/Fail, and Near/Far. The table contains 7 rows of data. On the right, there is a large OPM display showing a green '0.03' and two buttons labeled 'dB' and '1550nm'. Below the table, there are buttons for 'Overwrite', 'Delete', 'Save', and 'Set Reference'. A yellow arrow points from the 'Delete' button to the 'Editing Controls' section below.

Index	ID	Tone	Reading	λ	Pass/Fail	Near/Far
1	ALPHA_NA_BLUE_1	None	0.43 dB	1550	Pass	Near
2	ALPHA_NA_BLUE_2	None	0.45 dB	1550	Pass	Near
3	ALPHA_NA_ORANGE_1	None	0.55 dB	1550	Pass	Near
4	ALPHA_NA_ORANGE_2	None	0.84 dB	1550	Pass	Near
5	ALPHA_NA_GREEN_1	None	0.98 dB	1550	Pass	Near
6	ALPHA_NA_GREEN_2	None	1.04 dB	1550	Pass	Near
7	ALPHA_NA_BROWN_1	None	0.52 dB	1550	Pass	Near

**Editing Controls**  
*These buttons allow saving and editing of the data in this window.*

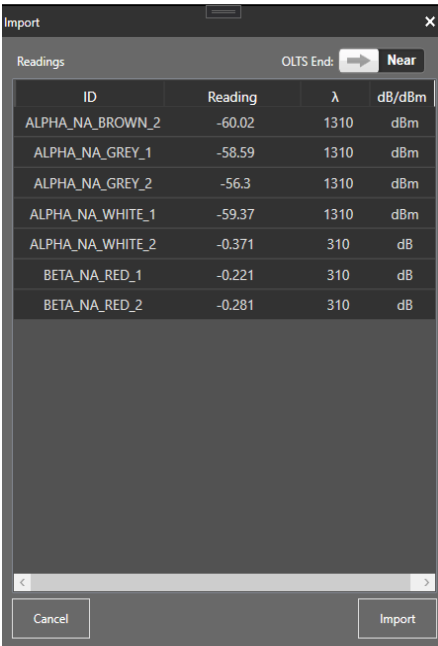

The screenshot shows the 'Import' dialog box in InSpec software. It has a title bar 'Import' and a close button. Below the title bar, there is a 'Readings' section with a table of data and an 'OLTS End:' dropdown menu set to 'Near'. The table has columns: ID, Reading, λ, and dB/dBm. At the bottom, there are 'Cancel' and 'Import' buttons.

ID	Reading	λ	dB/dBm
ALPHA_NA_BROWN_2	-60.02	1310	dBm
ALPHA_NA_GREY_1	-58.59	1310	dBm
ALPHA_NA_GREY_2	-56.3	1310	dBm
ALPHA_NA_WHITE_1	-59.37	1310	dBm
ALPHA_NA_WHITE_2	-0.371	310	dB
BETA_NA_RED_1	-0.221	310	dB
BETA_NA_RED_2	-0.281	310	dB

The RP560 may be used in either the LIVE mode (saving readings as you go) or you may offload the existing readings on an RP560 into the InSpec software

To offload readings saved on the RP560 into the InSpec software, navigate to the Menu>Projects and select Sync USB on the RP560 unit.

The dialog box shown here will appear in the InSpec window on your computer. By default, all readings will be imported. To import only selected readings, hold CTRL on the keyboard and click the readings to be imported: they will be highlighted. Users can also hold the Shift key and click the first and last reading in a range to select the entire range. Click Import when ready to sync readings into InSpec.

Index	ID	Tone	Reading	λ	Pass/Fail	Near/Far
1	1	None	-60.02 dBm	1310	Fail	Near
2	2	None	-58.59 dBm	1310	Fail	Near
3	3	None	-56.3 dBm	1310	Fail	Near
4	4	None	-59.37 dBm	1310	Fail	Near

The left side of the window displays the readings from the RP560 after they have been synced into the software. Any readings that were Deleted from the RP560 will be omitted from the synced data.

If the software is being used to save data during the fiber test, the buttons onscreen can be used to perform the tests. Note that the live information from the RP560 Main screen is displayed on the right side of the window.

**Wavelength**  
Click here to change the measured wavelength. Changes will be mirrored on the RP560.

**dB/dBm**  
Click here to switch between dB and dBm measurement modes. Click-and-hold for 2 seconds to set reference when in dBm mode (or click Set Ref button below). Changes will be mirrored on the RP560.

**Delete**  
Click to delete selected reading(s). They cannot be recovered. This does not affect readings saved to the RP560 internal memory.

**Save**  
Click to save the current reading. The reading will appear in the data window on the left side of the screen.

The saved data that is synced into the software or saved live can be edited for final reporting in the Reports tab.

The screenshot shows a software interface with a menu bar (File, Settings, Generate, Help) and two tabs: OPM and Reports. The Reports tab is active, displaying a table with the following data:


Index	ID	Tone	Reading	$\lambda$	Pass/Fail	Near/Far
1	1	None	-60.02 dBm	1310	Fail	Near
2	2	None	-58.59 dBm	1310	Fail	Near
3	3	None	-56.3 dBm	1310	Fail	Near
4	4	None	-59.37 dBm	1310	Fail	Near
5	5	None	-0.391 dB	310	Fail	Near
6	6	None	-0.371 dB	310	Fail	Near
7	7	None	-0.221 dB	310	Fail	Near
8	8	None	-0.281 dB	310	Fail	Near

Below the table are two buttons: 'Edit' and 'Delete'. A yellow arrow points from the 'Edit' button to the text 'Edit Edit multiple readings.' and another yellow arrow points from the 'Delete' button to the text 'Delete Delete selected reading(s).'

**Edit**  
Edit multiple readings.

**Delete**  
Delete selected reading(s).

Double-click on any one reading to edit the "ID" column for that reading. Or select the reading and click "Edit Selected".

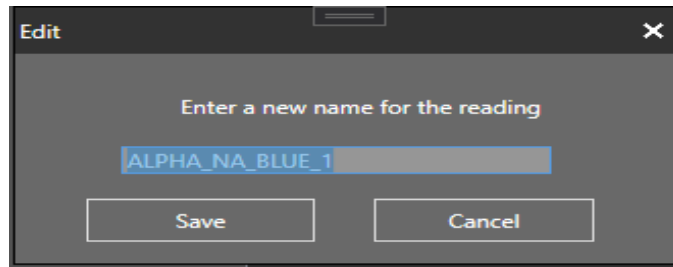


The ID column changes are shown immediately.

Index	ID	Tone	Reading	$\lambda$	Pass/Fail	Near/Far
1	test	None	-60.02 dBm	1310	Fail	Near
2	2	None	-58.59 dBm	1310	Fail	Near

Use the CTRL key on the computer keyboard and click multiple readings to select multiple readings for editing. To select a range of readings, click the first reading in the range, hold the Shift key on the computer keyboard, and click the last reading in the range.



Index	ID	Tone	Reading	$\lambda$	Pass/Fail	Near/Far
1	test	None	-60.02 dBm	1310	Fail	Near
2	2	None	-58.59 dBm	1310	Fail	Near
3	3	None	-56.3 dBm	1310	Fail	Near
4	4	None	-59.37 dBm	1310	Fail	Near
5	5	None	-0.391 dB	310	Fail	Near

With multiple readings selected, click the Edit button to bring up the multi-editor. Edit the information and click "Confirm" to change the ID for multiple items.

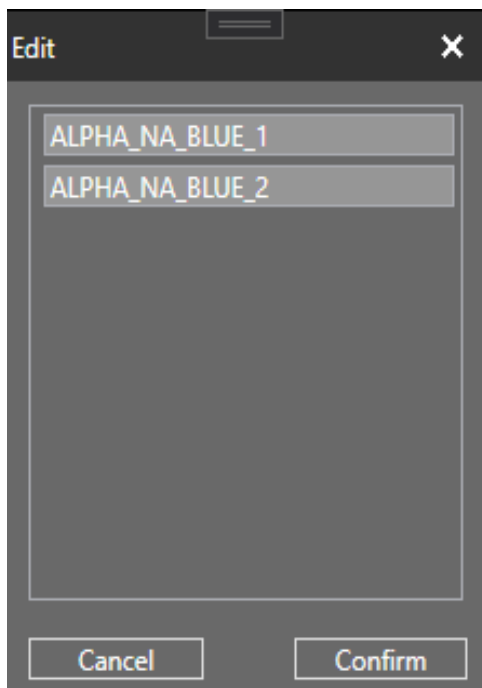


Index	ID	Tone	Reading	$\lambda$	Pass/Fail	Near/Far
1	test	None	-60.02 dBm	1310	Fail	Near
2	2	None	-58.59 dBm	1310	Fail	Near
3	3	None	-56.3 dBm	1310	Fail	Near

To choose or create color codes, click **Settings>Color Codes**.

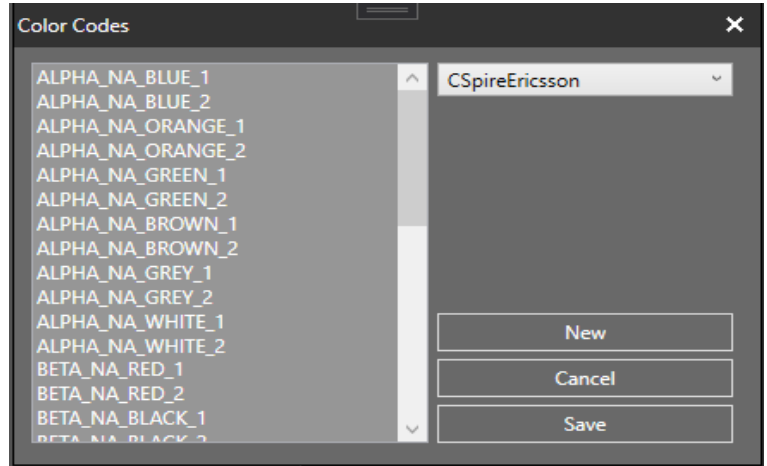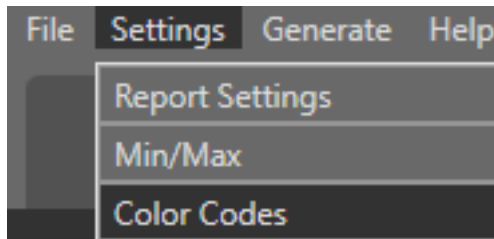

Click the dropdown box to select from preset color codes, or click "New" to create your own color codes which can be used in the future.

When using a Custom option, enter the color codes in the white space on the left side of the window. Each line represents an indexed location. Click "Save" when finished.


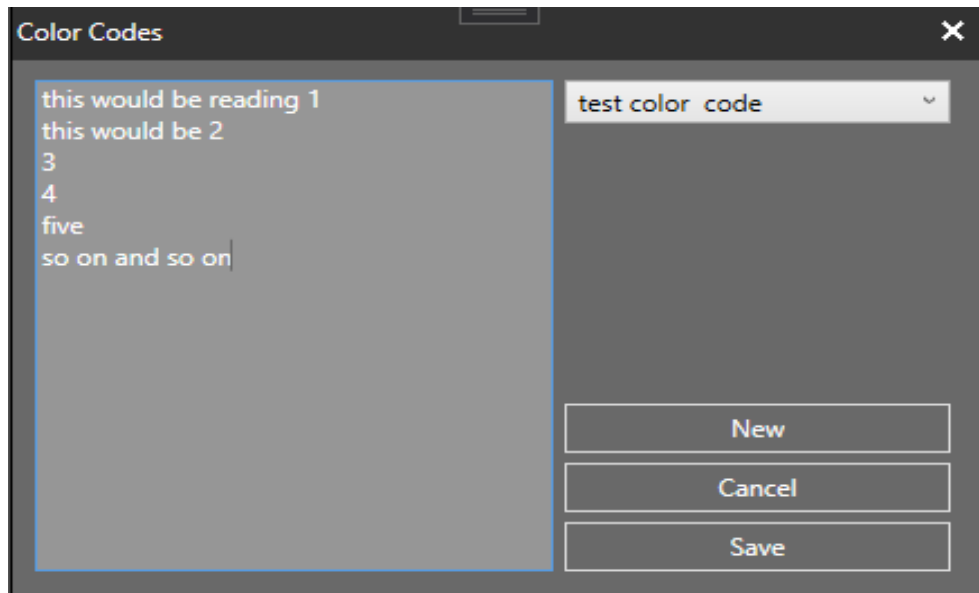


The color codes entered or selected will fill the available readings. For example, the Custom setting has 6 entries, but only 5 readings are saved. Any additional readings are indexed as usual.

Index	ID	Tone	Reading	λ	Pass/Fail	Near/Far
1	This would be reading 1	None	-60.02 dBm	1310	Fail	Near
2	This would be 2	None	-58.59 dBm	1310	Fail	Near
3	3	None	-56.3 dBm	1310	Fail	Near
4	4	None	-59.37 dBm	1310	Fail	Near
5	Five	None	-0.391 dB	310	Fail	Near
6	So on and So on	None	-0.371 dB	310	Fail	Near
7	7	None	-0.221 dB	310	Fail	Near
8	8	None	-0.281 dB	310	Fail	Near



To change the Pass/Fail column, click **Settings>Min/Max**.

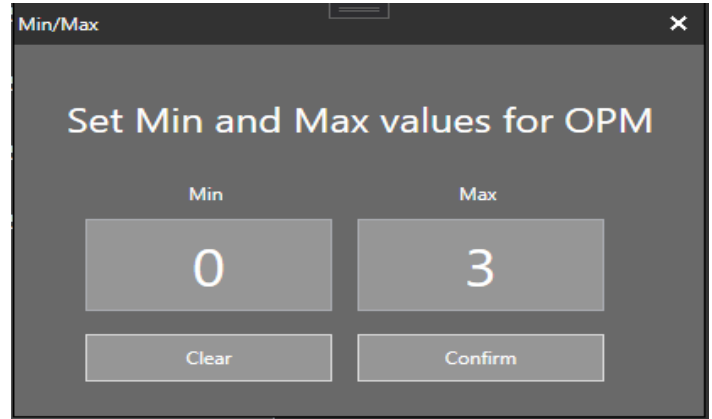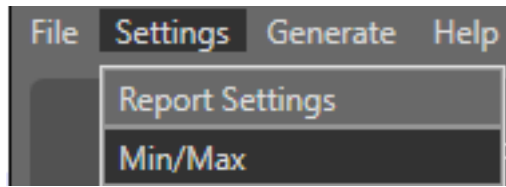

Loss minimum is usually set to 0. A maximum of 3 is standard for most fiber tests. Set Min and Max to any values as needed, then click "Apply".

Index	ID	Tone	Reading	$\lambda$	Pass/Fail	Near/Far
1	This would be reading 1	None	-60.02 dBm	1310	Fail	Near
2	This would be 2	None	-58.59 dBm	1310	Fail	Near
3	3	None	-56.3 dBm	1310	Fail	Near
4	4	None	0.24 dB	1310	Pass	Near
5	Five	None	0.24 dB	1310	Pass	Near
6	So on and So on	None	0.24 dB	1310	Pass	Near

Any readings which fall within the Min/Max range provided will be given a PASS designation. Readings that do not fall within the range will be given a FAIL designation.

To change the Report Settings, click **Settings>Report Settings**.

Report Settings

Clear Headers Clear Data Reset To Defaults

Customer Name Contact Name

Testing Company Testers Name

Test Location Comments

Scope Power Meter

MILLER®  
A RIPLEY® BRAND

Browse...

Report Type PDF

Use Current Time

Save Exit


All information in the dark and light boxes are editable. The default settings are shown above. Click "Reset to Defaults" to return to this arrangement of information. Enter all info as needed and click Save to have the information appear on reports.

The Ripley Miller logo will appear on reports. Click Browse to choose a different logo to place on the report, if desired.

Changing the selected "Report Type" will change what format the reports are generated as. Currently PDF, HTML, XML, and Excel are supported


# Integration with Mobile InSpec



Ripley's InSpec application can be downloaded from the Google Play, Amazon, Apple, or Microsoft store, Allowing you to connect the RP560 to a smartphone via Bluetooth to perform live testing or to share data for fast reporting.

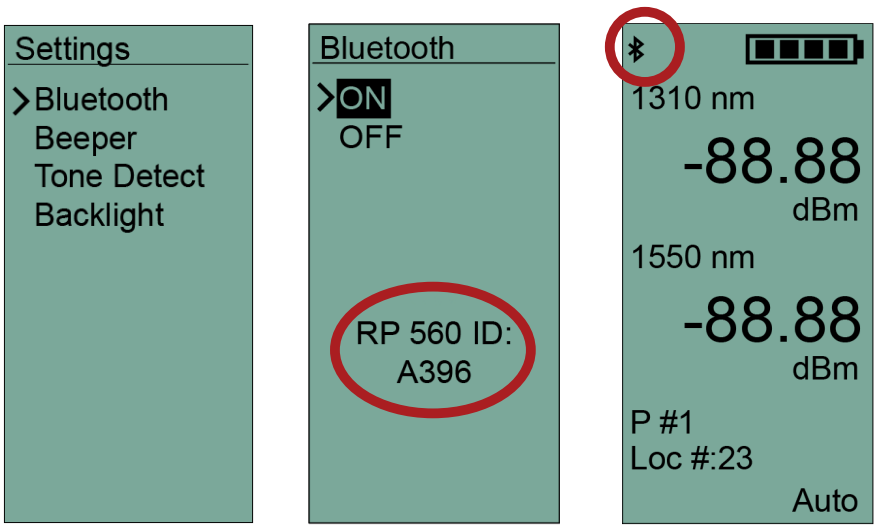

To turn the Bluetooth feature ON, navigate to the Settings menu, select Bluetooth, and Select ON. The RP560 device ID is shown on this screen; take note of it. The Bluetooth icon will be shown on the main screen of the RP560.

Open the InSpec app on your Android device. Touch the "OPM Page" button to access the OPM page of the app. Touch the icon in the top right corner of the screen and select "Bluetooth" to access Bluetooth settings.

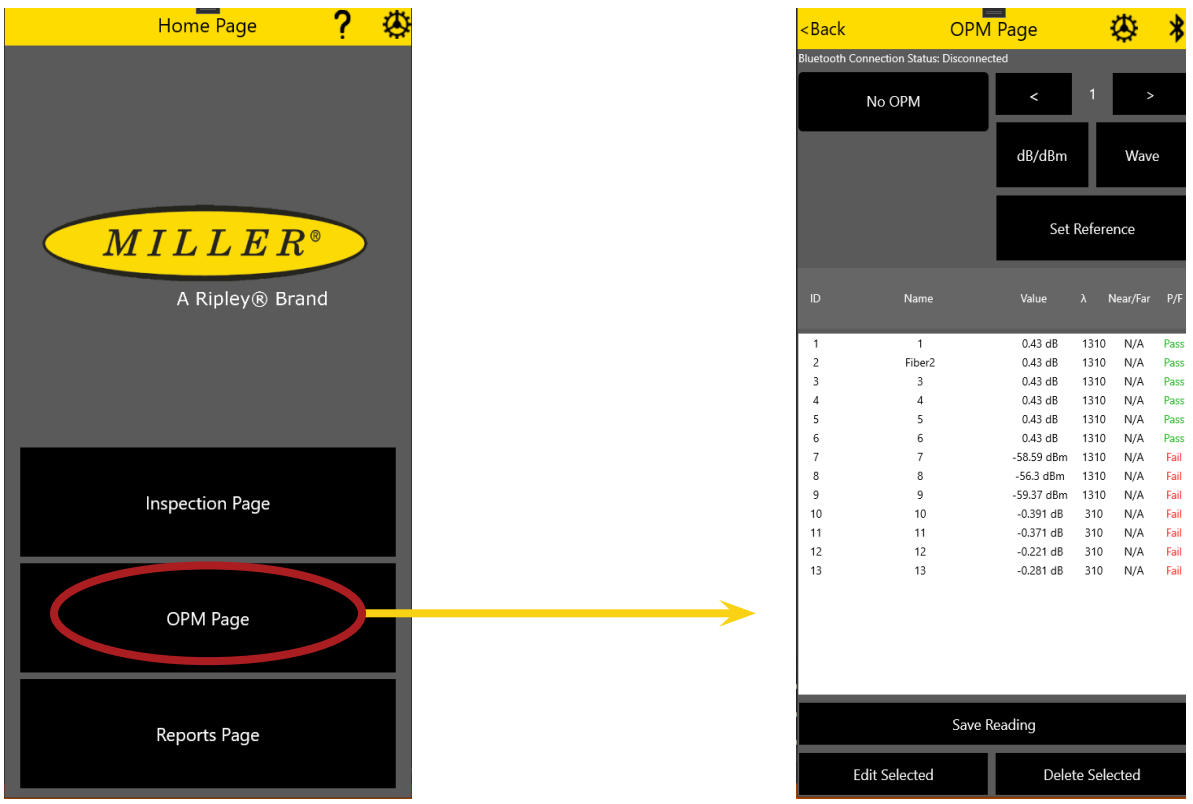

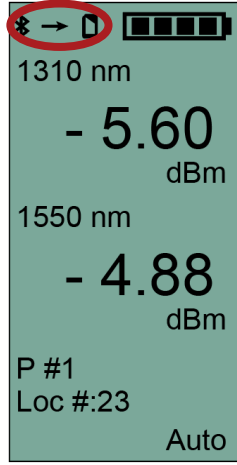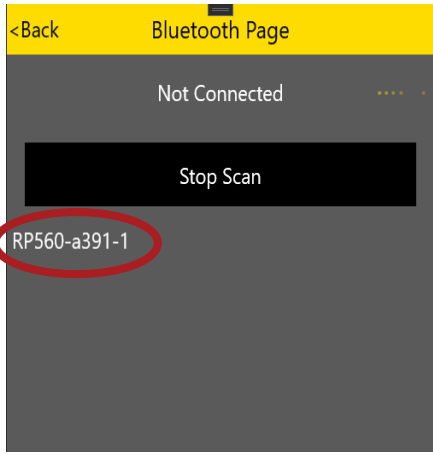


Touch the Scan button, and select your RP560 unit when it appears in the list. When the RP560 is connected to the Android device via Bluetooth, a connection icon will appear on the RP560 screen.

The diagram below shows the features of the main screen of the InSpec app. All changes to the RP560 streamed data will be mirrored on the physical RP560 unit.

**Reading Display**  
All info from the RP560 is displayed in this area.

**Saved Data**  
Data is saved in this list whenever the Save Reading button is touched. Data is NOT saved on the RP560.

**Edit Selected**  
Change the Name ID of the selected data row.

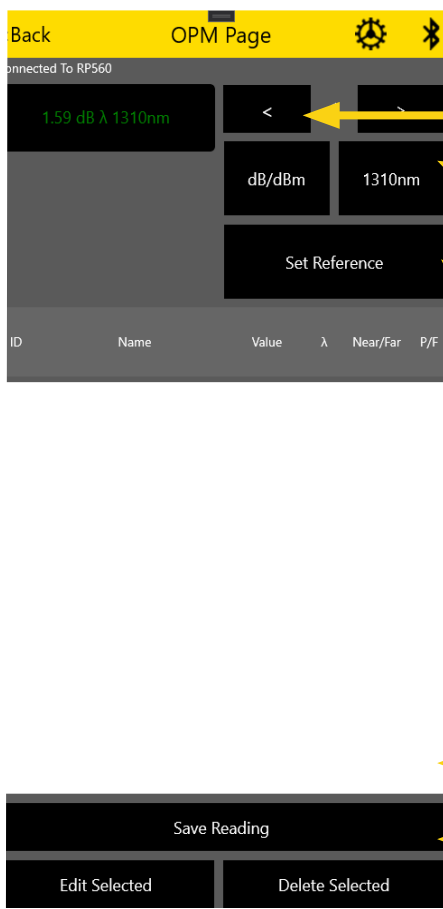

**dB/dBm**  
Touch this button to switch between supported modes


**Wavelength Selector**  
Touch this button to choose the measured wavelength, or use Auto mode.

**SetRef**  
Touch this button to set the reference when in dBm mode.



**Save Reading**  
Save the data from the Display section as a new row in the Saved Data list. In Dual measurement mode, two rows will be saved.

**Delete Selected**  
Delete the selected data row.

Touch a saved reading to select it from the list; it will be highlighted. Touch Edit Selected to edit that reading. Use the onscreen keyboard to enter a new name, then select OK. The new name will appear in the "Name ID" column. Any reading in the list can be deleted by selecting it and touching Delete Selected.

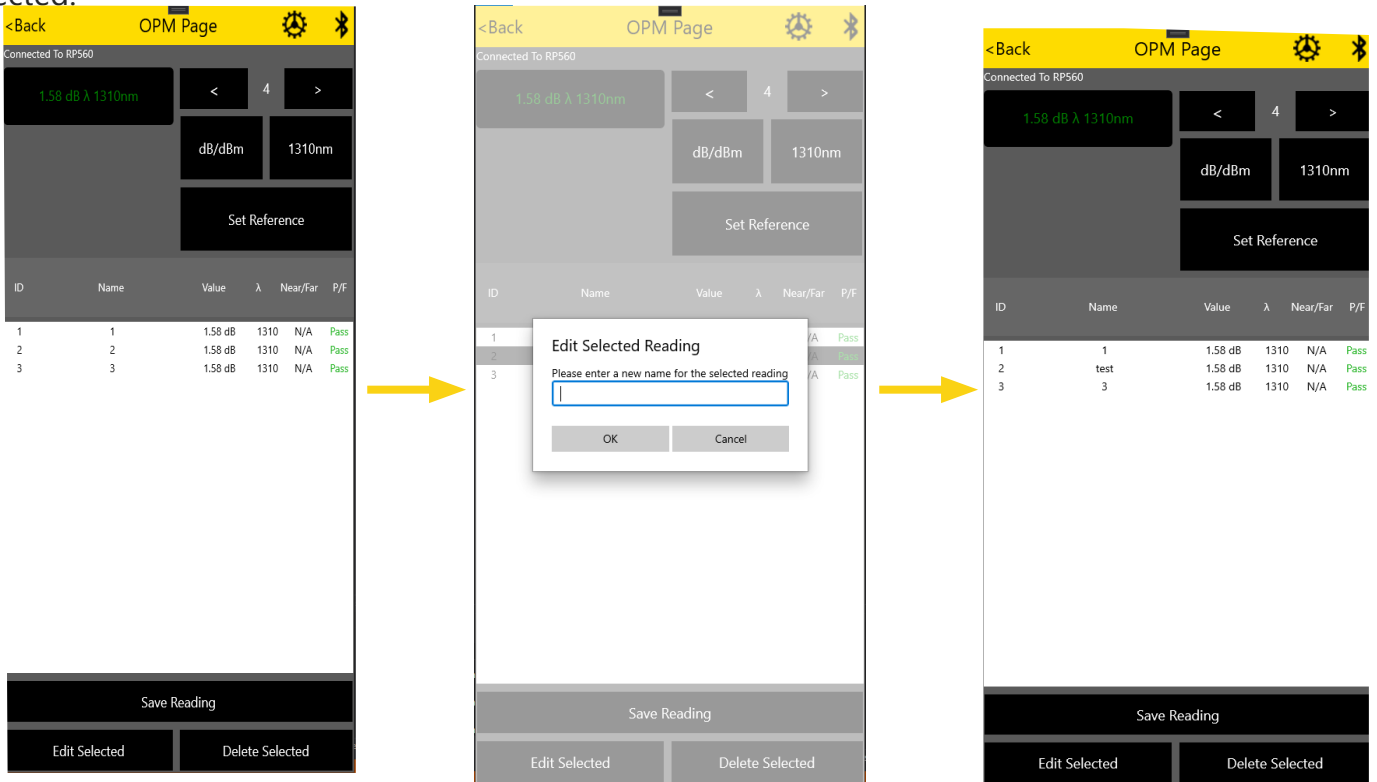


To set PASS/FAIL limits for testing, touch the icon in the top right corner of the screen, and select OPM Settings. The currently-set Min and Max will be displayed. Touch the Set button to set the Min and Max, then touch Confirm. If no values are set, PASS/FAIL is disabled.

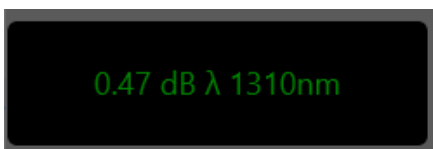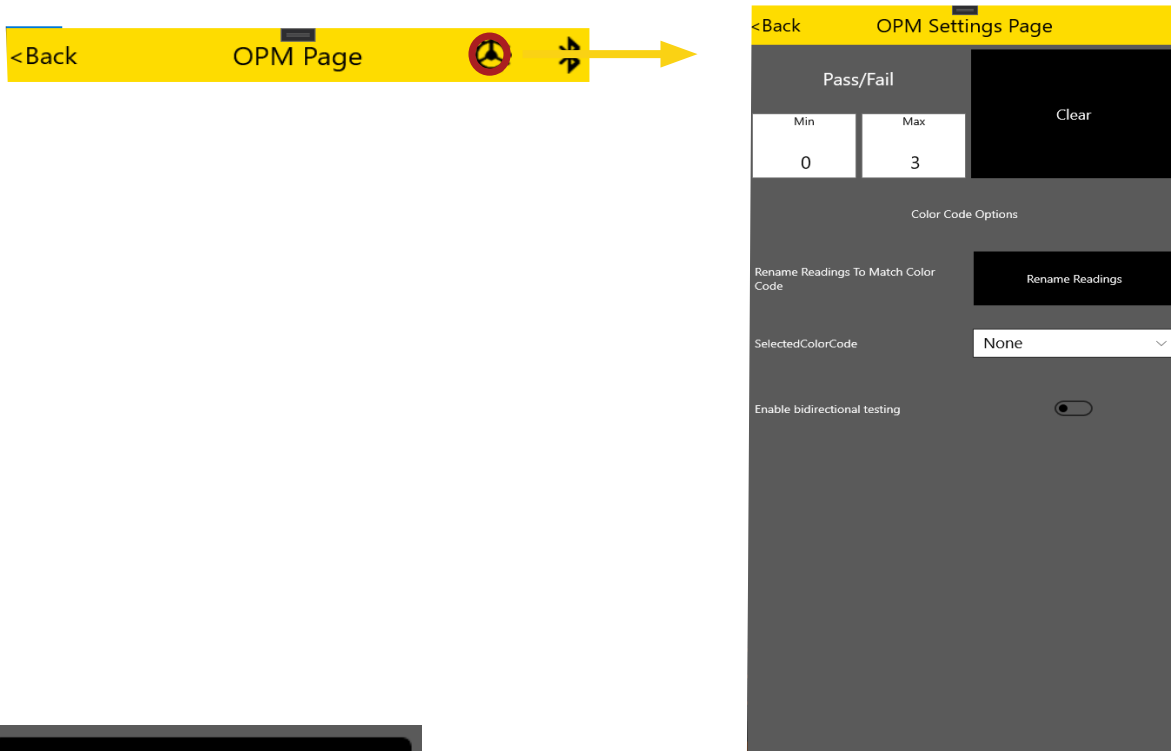

Any readings which fall between the Min and Max values will be displayed in green in the display and the saved data field. Readings which fall outside this range will be displayed in red.


Data which has been saved on the RP560 can also be imported into the InSpec app. Navigate to the Project folder with readings saved in it on the RP560 and select Sync BT. The readings will appear in a list on the InSpec app. Choose the readings to import using the checkboxes, then touch Import to bring the data into the app.

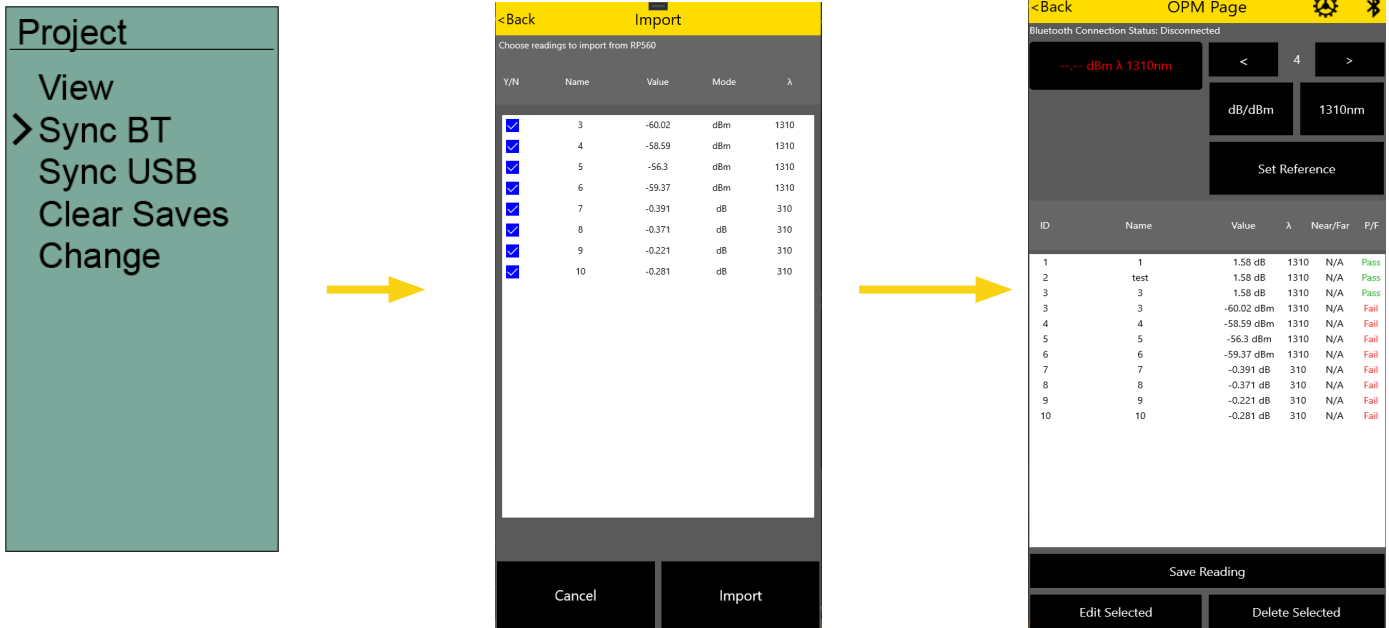

To make and send a report from the InSpec app, touch the icon in the top left of the screen and select Reports from the flyout menu.

**NOTE:** the RP560 data stream will disconnect automatically when the Reports screen is accessed. To restart the data stream and continue testing, follow the connection instructions on page 19.

Delete and/or edit any readings as needed using the buttons onscreen, then touch Make Report. Next select the type of report and format. Finally share the report using whichever method you prefer.

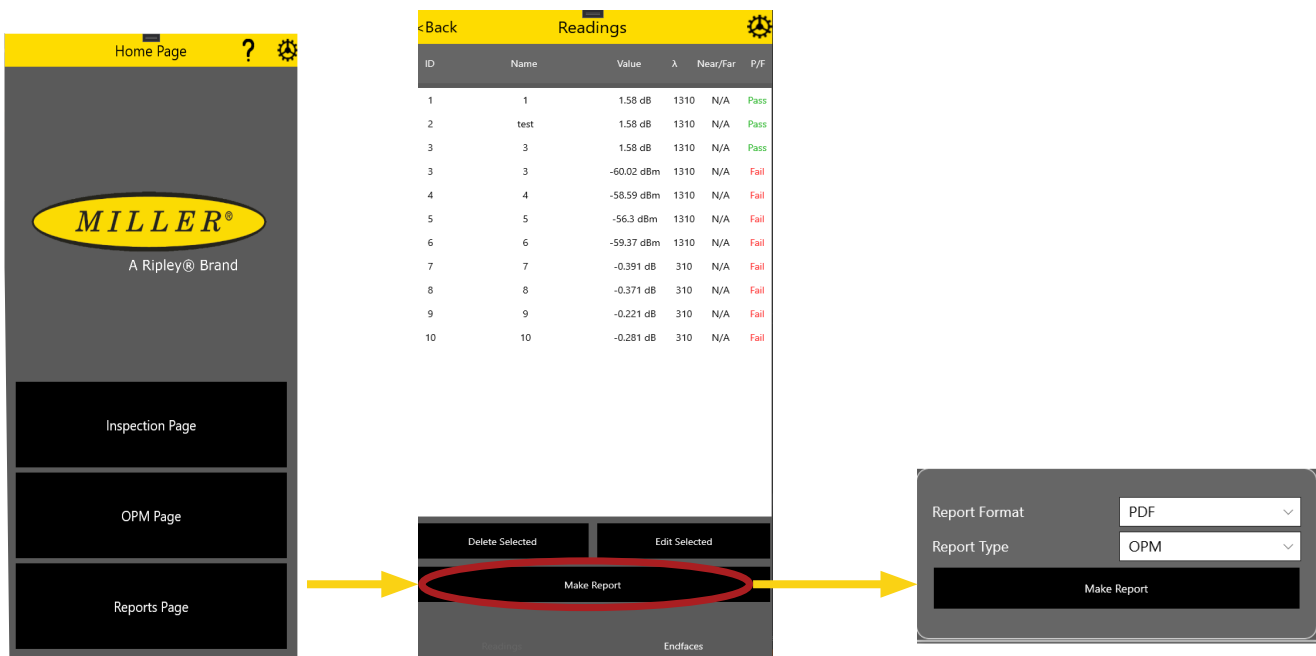

# Common Test Procedures

This section provides an overview of common tests and procedures which may be performed with the RP560 optical power meter.

## Protective Adapter Cover

The power meter input adapter is covered by a protective cap.



## Adapters


The RP560 comes with a 2.5mm universal adapter. The adapter accepts all fiber connectors with 2.5mm ferrules. Common



To remove the 2.5mm adapter, unscrew it from the adapter post on the top of the RP560.



Additional adapters are available from Ripley. All adapters attach to the RP560 by screwing on to the adapter post.

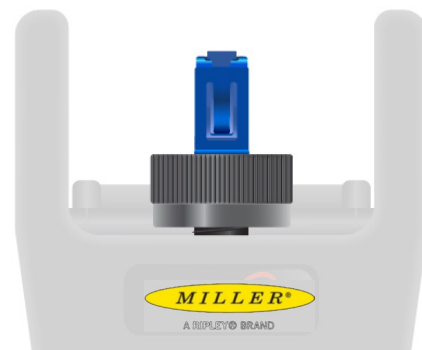

## Checking Light Source Output Power - dBm Measurement Mode

The dBm measurement mode is used to evaluate the output power of a laser or LED signal being transmitted on the fiber.



The dBm measurement mode may be used to check the output power of a light source at a specific location in the optical link.



In the example shown here, the fiber has been unplugged from the optical system (transmitting data on the 1310nm wavelength) and plugged into the RP560 power meter. The optical system is still transmitting light on the fiber to the point where it has been unplugged. The RP560 is in the dBm measurement mode and is set to measure the 1310nm wavelength.

The dBm measurement indicates the absolute power of the optical signal. This information is helpful when determining if a piece of equipment will function with the current light input.

For example, if the fiber was unplugged from a network terminal requiring a -7dBm or higher power level to function, it could be deduced that the network terminal in the example shown above will function appropriately because the optical power is higher than -7dBm.



## Setting a Reference and Testing for Loss - dB Measurement Mode

If a length of fiber should be tested for Insertion Loss (also commonly called Attenuation or dB Loss),




In the example shown here, a DLS 655 dual laser source is being used to set the reference on the RP560 optical power meter. Any singlemode test jumper can be used, provided the adapters on the DLS 655 and RP560 match the connectors on the test jumper.

The DLS 655 is in the dual wavelength mode. If the RP560 is set to the Auto-ID mode [**Menu>Wavelength>Auto-ID**] then it will recognize both wavelengths at once.

In the dBm mode, the RP560 indicates the output power of the laser source for each wavelength. The DLS 655 is calibrated to put out a -8.0dBm ( $\pm 2.0$ dB) signal in the dual wavelength mode. If the signal is in that range, the reference can be set.



Press and **HOLD** the dB/dBm/SetRef button to set the reference for both wavelengths simultaneously.

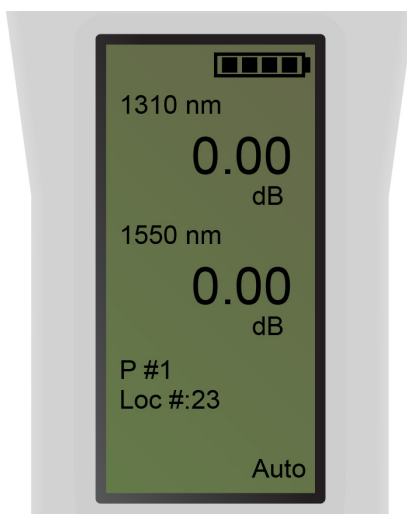

The RP560 will switch to the dB mode for each wavelength, and the readout will display 0.00dB ( $\pm 0.05$ dB).

The readout will display the 0.00dB reading any time the DLS 655 and RP560 are connected with no changes to the test jumper. This is the "reference point" for the Insertion Loss Test.

When the fiber being tested (highlighted below) is added into the link between the test jumper and RP560, the **LOSS** on the fiber is shown on the RP560 screen. The loss for each wavelength may be different.

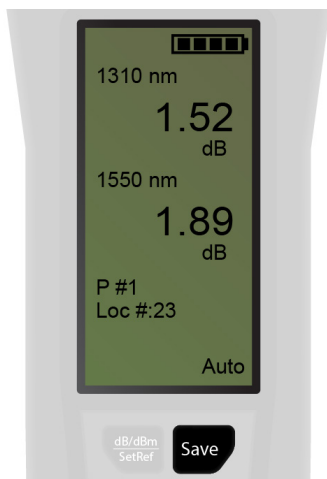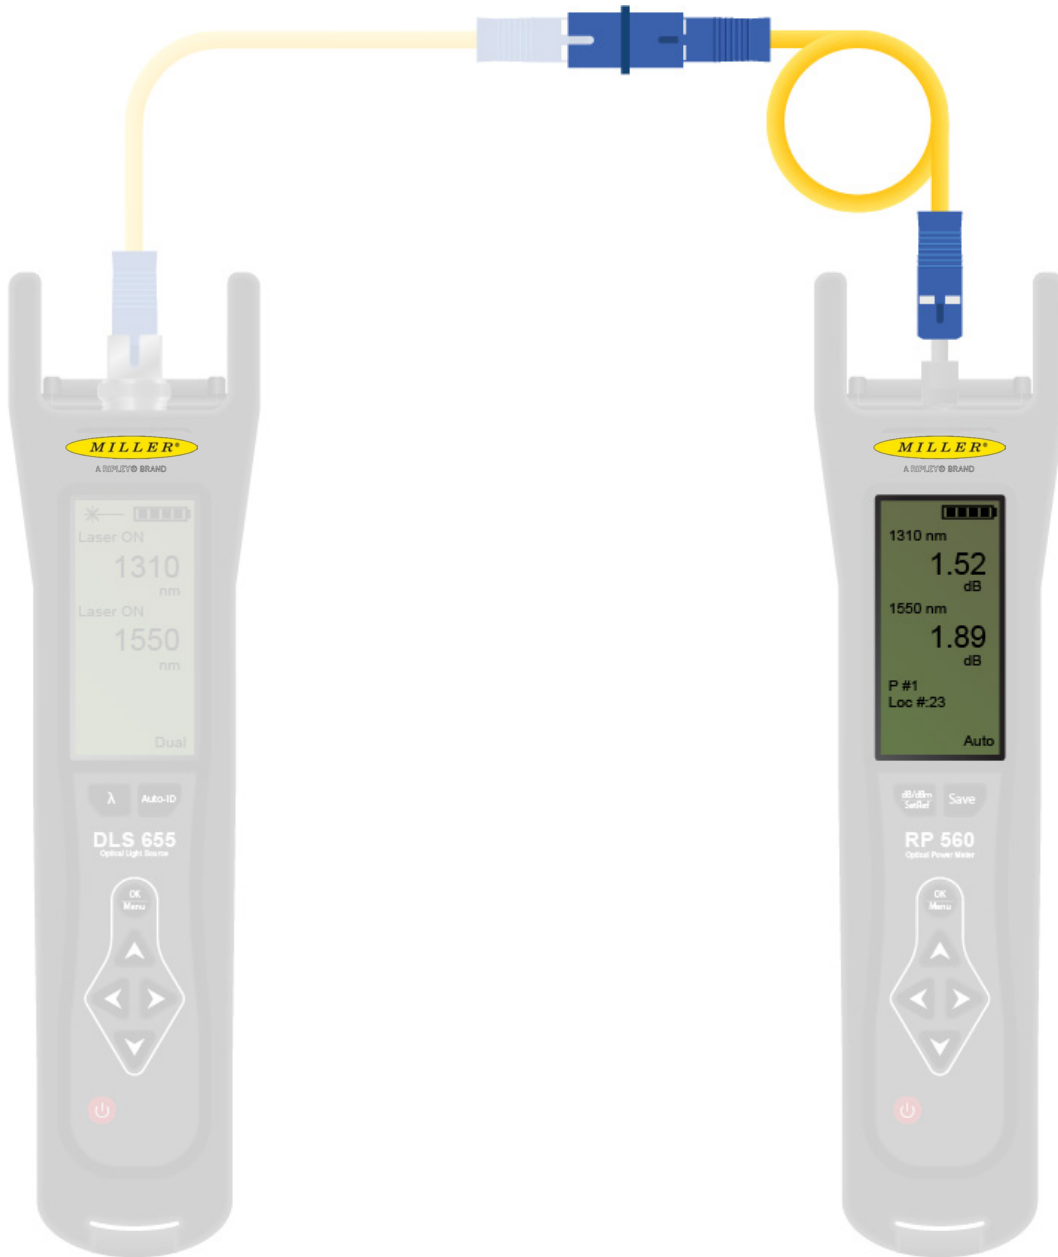

Press the Save button to save both readings.

NOTE that the loss readings will be saved individually if two wavelengths are being tested. The Location indicator will increase by 2 each time the Save button is pressed.

# Specifications

OPTICAL POWER METER	
<b>Detector Type</b>	<b>-02:</b> InGaAs / <b>-04:</b> Filtered InGaAs
<b>Measurement Range</b>	<b>-02:</b> +6 to -70dBm / <b>-04:</b> +23 to -45dBm
<b>Wavelength Range</b>	850nm to 1650nm
<b>Selectable Wavelengths</b>	850 / 1300 / 1310 / 1490 / 1550 / 1611 / 1625 nm
<b>Resolution</b>	0.01dB
<b>Absolute Accuracy</b>	± 0.25 dB (0dBm, 22C to 25C)
<b>Optical Interface</b>	Universal 2.5mm (Additional Adapters Available)
<b>Display</b>	LCD
<b>Tone ID</b>	2kHz, 1kHz, 330Hz, 270Hz
<b>Storage</b>	10,000+ Measurements, 4 storage folders
<b>Data Transfer</b>	Micro USB or Bluetooth
<b>Power</b>	Push Button Toggle / Auto OFF
<b>Battery</b>	AA - 2 Alkaline Batteries Included
<b>Dimensions</b>	5.8cm x 21.5cm x 3.0cm
<b>Weight</b>	6 oz

## Ordering Information - Accessories

### Power Meter Adapters

PART NO.	DESCRIPTION
AC 020	2.5 mm Universal Adapter
AC 021	1.25 mm Universal Adapter
AC 026	SC Adapter for Optical Power Meter
AC 027	ST Adapter for Optical Power Meter
AC 028	FC Adapter for Optical Power Meter
AC 029	LC Adapter for Optical Power Meter
AC 126	SC/APC Adapter for Optical Power Meter

### Patch Cord Accessories

PART NO.	DESCRIPTION
AC 500	SM SC-LC - 1m Simplex
AC 501	SM SC-SC - 1m Simplex
AC 502	SM LC-LC - 1m Simplex
AC 550	MM SC-LC - 1m Simplex
AC 552	MM LC-LC - 1m Simplex
AC 600	SC-SC Simplex Bulkhead Adapter
AC 601	LC-LC Simplex Bulkhead Adapter
AC 602	LC-LC Duplex Bulkhead Adapter

### Cleaning Tools

PART NO.	DESCRIPTION
AC 089	One-Click Cleaner for 1.25mm & ODC Ferrules / Bulkheads
AC 099	One-Click Cleaner for 2.5mm Ferrules / Bulkheads
AC 090	1.25mm Swabs (100 per Pack)
AC 091	2.5mm Swabs (100 per Pack)
AC 092	SqR Pad & Fiber Wash Pen
AC 190	Cletope Cleaner - Type B - Blue Tape

# Certifications and Contact Information



This product conforms with health, safety, and environmental protection standards for products sold within the European Economic Area (EEA). This product was tested by an ISO 17025 accredited laboratory and complies with the following CE directives and standards listed below:



Directives:  
Electromagnetic Compatibility (2014/30/EU)  
Low-Voltage (2014/35/EU)  
Standards:  
EMC: EN 61326-1:2013 Industrial  
Safety: EN/IEC61010-1:2010+A1:2016

Contains FCC ID: T9JRN4020

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Windows is a registered trademark of Microsoft Corporation in the United States and/or other countries. Android is a trademark of Google LLC. Apple is a registered trademark of Cisco in the U.S. and other countries and is used under license. The Bluetooth word mark is a registered trademark owned by Bluetooth SIG, Inc.

## Contact Support

contact us with any questions pertaining to this or any other Ripley product.

 **Call Us:**  
(603) 524-8350

 **Email Us:**  
[tech.support@odm.ripley-tools.com](mailto:tech.support@odm.ripley-tools.com)

 **Visit Us Online:** [www.ripley-tools.com](http://www.ripley-tools.com)